




## WARDROBE LOCKERS WITH DOUBLE PARTITION AND 3 MODULES

**Length** 1200, 1500

**Width** 400, 500

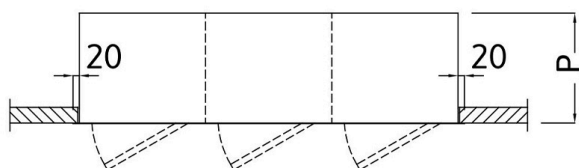


Wardrobe cabinet manufactured in AISI 304 with scotch brite finish. Hinged door mounted on removable hinges, equipped with key lock and upper and lower ventilation holes for air flow. The cabinet is divided into 2 compartments by a vertical partition: clean area and dirty area. Each compartment is equipped with 1 upper shelf with hanging rod and 1 lower shelf, both adjustable in height. On stainless steel telescopic feet, the rear ones advanced for rounded floor.

---

**SKU:** N/A

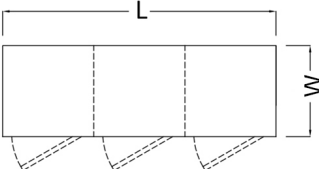

		W	
		400	500
L	Cod.	Cod.	Cod.
	1200	T67501001	T67502001
	1500	T67501002	T67502002

**W** = Width / Profondità / Breite / Profondeur.  
**L** = Length / Larghezza / Länge / Longueur.