



## SINK ON CUPBOARD WITH HINGED DOORS WITH 1 FULL-WIDTH SINK BOWL



**Length** 700, 800

**Width** 600, 700


Manufactured in stainless steel AISI 304. Working top with welded sink bowl, dripping area where indicated, rounded (R=10mm) front upper edge, as well as rounded (R=2mm) side and back edges. Rear stainless steel upstand H=100mm, welded and closed on the back, and with R=10mm rounded lower edge. Hinged doors mounted on removable hinges, or sliding doors mounted on hygienic rails, easily removable without mechanical tools. Open back for hydraulic connections. PVC siphon, drain and stainless steel overflow included. On stainless steel telescopic feet, the rear ones advanced for rounded floor.

---

**SKU:** N/A



| L   | W<br>600  |             |     | S   |     |           | W<br>700    |     |     | S   |  |  |
|-----|-----------|-------------|-----|-----|-----|-----------|-------------|-----|-----|-----|--|--|
|     | Cod.      | LxHxP       | A   | B   | C   | Cod.      | LxHxP       | A   | B   | C   |  |  |
| 700 | T40501003 | 500x400x250 | 500 | 200 | 490 | T40502003 | 500x500x300 | 500 | 200 | 440 |  |  |
| 800 | T40501004 | 500x400x250 | 550 | 250 | 490 | T40502004 | 600x500x315 | 600 | 200 | 425 |  |  |

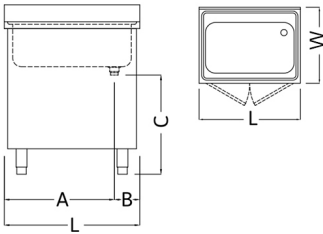

**S** = Sink bowl / Vasche / Becken / Bac.  
**W** = Width / Profondità / Breite / Profondeur.  
**L** = Length / Larghezza / Länge / Longueur.