



SINK ON CUPBOARD WITH HINGED DOORS WITH 1 FULL-WIDTH SINK BOWL




Length 700, 800


Width 600, 700

Manufactured in stainless steel AISI 304. Working top with welded sink bowl, dripping area where indicated, rounded (R=10mm) front upper edge, as well as rounded (R=2mm) side and back edges. Rear stainless steel upstand H=100mm, welded and closed on the back, and with R=10mm rounded lower edge. Hinged doors mounted on removable hinges, or sliding doors mounted on hygienic rails, easily removable without mechanical tools. Open back for hydraulic connections. PVC siphon, drain and stainless steel overflow included. On stainless steel telescopic feet, the rear ones advanced for rounded floor.

SKU: N/A

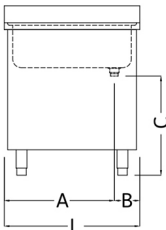

		W	S				W	S			
		600					700				
L	Cod.	LxHxP	A	B	C	Cod.	LxHxP	A	B	C	
	700	T40501003	500x400x250	500	200	490	T40502003	500x500x300	500	200	440
	800	T40501004	500x400x250	550	250	490	T40502004	600x500x315	600	200	425

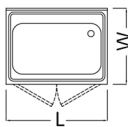

S = Sink bowl / Vasche / Becken / Bac.
W = Width / Profondità / Breite / Profondeur.
L = Length / Larghezza / Länge / Longueur.