



## SINK ON CUPBOARD WITH SLIDING DOORS WITH 2 STANDARD SINK BOWL IN THE MIDDLE

**Length** 1800, 1900, 2000, 2100, 2200, 2400

**Width** 600, 700




Manufactured in stainless steel AISI 304. Working top with 2 welded sink bowls, dripping area where indicated, rounded (R=10mm) front upper edge, as well as rounded (R=2mm) side and back edges. Rear stainless steel upstand H=100mm, welded and closed on the back, and with R=10mm rounded lower edge. Sliding doors mounted on hygienic rails, easily removable without mechanical tools. Open back for hydraulic connections. PVC siphon, drain and stainless steel overflow included. On stainless steel telescopic feet, the rear ones advanced for rounded floor.

---

**SKU:** N/A



L	W			S			W			S		
	600			700			600			700		
	Cod.	LxHxP	A	B	C	Cod.	LxHxP	A	B	C		
1800	T40601030	400x400x250	900	900	460	T40602030	400x500x250	900	900	460		
1900	T40601031	400x400x250	950	950	460	T40602031	400x500x250	950	950	460		
2000	T40601032	500x400x250	1000	1000	460	T40602032	500x500x300	1000	1000	410		
2100	T40601033	500x400x250	1050	1050	460	T40602033	500x500x300	1050	1050	410		
2200	T40601034	500x400x250	1100	1100	460	T40602034	600x500x315	1100	1100	395		
2400	-	-	-	-	-	T40602035	600x500x315	1200	1200	395		

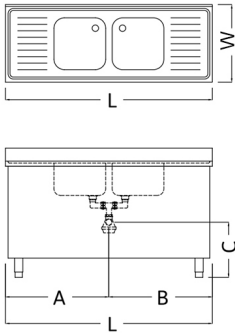

**S** = Sink bowl / Vasche / Becken / Bac.  
**W** = Width / Profondità / Breite / Profondeur.  
**L** = Length / Larghezza / Länge / Longueur.