



SINK ON CUPBOARD WITH SLIDING DOORS WITH 2 STANDARD SINK BOWL ON THE LEFT





Length	1400, 1500, 1600, 1700, 1800, 1900, 2000
Width	600, 700

Manufactured in stainless steel AISI 304. Working top with 2 welded sink bowls, dripping area where indicated, rounded (R=10mm) front upper edge, as well as rounded (R=2mm) side and back edges. Rear stainless steel upstand H=100mm, welded and closed on the back, and with R=10mm rounded lower edge. Sliding doors mounted on hygienic rails, easily removable without mechanical tools. Open back for hydraulic connections. PVC siphon, drain and stainless steel overflow included. On stainless steel telescopic feet, the rear ones advanced for rounded floor.

SKU: N/A



L	W			S			W			S		
	600						700					
	Cod.	LxHxP	A	B	C	Cod.	LxHxP	A	B	C		

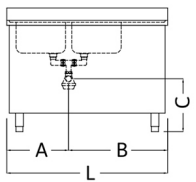

1400	T40601010	400x400x250	500	900	460	T40602010	400x500x250	500	900	460
1500	T40601011	400x400x250	500	1000	460	T40602011	400x500x250	500	1000	460
1600	T40601012	500x400x250	600	1000	460	T40602012	500x500x300	600	1000	410
1700	T40601013	500x400x250	600	1100	460	T40602013	500x500x300	600	1100	410
1800	T40601014	500x400x250	600	1200	460	T40602014	600x500x315	700	1100	395
1900	T40601015	500x400x250	600	1300	460	T40602015	600x500x315	700	1200	395
2000	T40601016	500x400x250	600	1400	460	T40602016	600x500x315	700	1300	395

S = Sink bowl / Vasche / Becken / Bac.
W = Width / Profondità / Breite / Profondeur.
L = Length / Larghezza / Länge / Longueur.