



SINK ON LEGS WITH 1 STANDARD SINK BOWL ON THE LEFT AND LOWER SHELF





Length	1000, 1200, 1300, 1400, 1500
Width	600, 700

Frame structure in stainless steel AISI 304 fully welded 40x40mm tube, 1.00mm thick, with rear legs 80mm advanced, suitable for rounded floor. Lower reinforced shelf fully welded to the framework. Top with welded sink bowl, dripping area where indicated, rounded (R=10mm) front upper edge, as well as rounded (R=2mm) side and back edges. Rear stainless steel upstand H=100mm, welded and closed on the back, and with R=10mm rounded lower edge. Front and side upper s.s. cover panels. PVC siphon, drain and stainless steel overflow included. On adjustable feet.

SKU: N/A

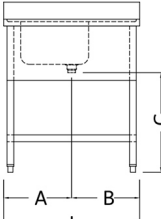

		W		S					W		S												
		600							700														
		L		Cod.		LxHxP		A		B		C		Cod.		LxHxP		A		B		C	
		1000	T40301020	500x400x250		475	525	490	T40302020		500x500x300		475	525	440								
		1200	T40301021	500x400x250		475	725	490	T40302021		500x500x300		475	725	440								
		1300	T40301022	500x400x250		525	775	490	T40302022		500x500x300		525	775	440								
		1400	T40301023	500x400x250		545	855	490	T40302023		600x500x315		585	815	425								
		1500	T40301024	500x400x250		565	935	490	T40302024		600x500x315		605	865	425								

S = Sink bowl / Vasche / Becken / Bac.

W = Width / Profondità / Breite / Profondeur.

L = Length / Larghezza / Länge / Longueur.