



SINK ON LEGS WITH 1 STANDARD SINK BOWL ON THE LEFT




Length	1000, 1200, 1300, 1400, 1500
Width	600, 700

Frame structure in stainless steel AISI 304 fully welded 40x40mm tube, 1.00mm thick, with rear legs 80mm advanced, suitable for rounded floor. Rear and side welded reinforcement rails. Top with welded sink, dripping area where indicated, rounded (R=10mm) front upper edge, as well as rounded (R=2mm) side and back edges. Rear stainless steel upstand H=100mm, welded and closed on the back, and with R=10mm rounded lower edge. Front and side upper s.s. cover panels. PVC siphon, drain and stainless steel overflow included. On adjustable feet.

SKU: N/A

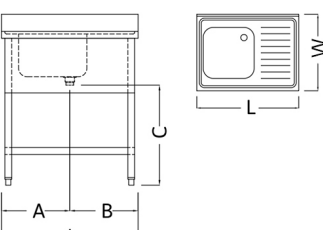

	W			S						W			S					
	600									700								
L	Cod.	LxHxP			A	B	C	Cod.	LxHxP			A	B	C				
	1000	T40001020	500x400x250			475	525	490	T40002020	500x500x300			475	525	440			
	1200	T40001021	500x400x250			475	725	490	T40002021	500x500x300			475	725	440			
	1300	T40001022	500x400x250			525	775	490	T40002022	500x500x300			525	775	440			
	1400	T40001023	500x400x250			545	855	490	T40002023	600x500x315			585	815	425			
	1500	T40001024	500x400x250			565	935	490	T40002024	600x500x315			605	865	425			

S = Sink bowl / Vasche / Becken / Bac.
W = Width / Profondità / Breite / Profondeur.
L = Length / Larghezza / Länge / Longueur.