



## SINK ON LEGS WITH 1 STANDARD SINK BOWL ON THE LEFT




<b>Length</b>	1000, 1200, 1300, 1400, 1500
<b>Width</b>	600, 700

Frame structure in stainless steel AISI 304 fully welded 40x40mm tube, 1.00mm thick, with rear legs 80mm advanced, suitable for rounded floor. Rear and side welded reinforcement rails. Top with welded sink, dripping area where indicated, rounded (R=10mm) front upper edge, as well as rounded (R=2mm) side and back edges. Rear stainless steel upstand H=100mm, welded and closed on the back, and with R=10mm rounded lower edge. Front and side upper s.s. cover panels. PVC siphon, drain and stainless steel overflow included. On adjustable feet.

---

**SKU:** N/A

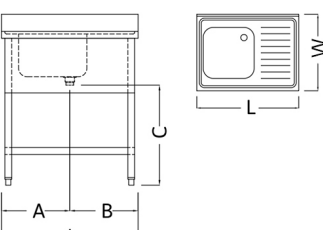

		W	S				W	S			
		600					700				
L	Cod.	LxHxP	A	B	C	Cod.	LxHxP	A	B	C	
	1000	T40001020	500x400x250	475	525	490	T40002020	500x500x300	475	525	440
	1200	T40001021	500x400x250	475	725	490	T40002021	500x500x300	475	725	440
	1300	T40001022	500x400x250	525	775	490	T40002022	500x500x300	525	775	440
	1400	T40001023	500x400x250	545	855	490	T40002023	600x500x315	585	815	425
	1500	T40001024	500x400x250	565	935	490	T40002024	600x500x315	605	865	425

**S** = Sink bowl / Vasche / Becken / Bac.  
**W** = Width / Profondità / Breite / Profondeur.  
**L** = Length / Larghezza / Länge / Longueur.