



SINK ON LEGS WITH 1 STANDARD SINK BOWL ON THE RIGHT




Length	1000, 1200, 1300, 1400, 1500
Width	600, 700

Frame structure in stainless steel AISI 304 fully welded 40x40mm tube, 1.00mm thick, with rear legs 80mm advanced, suitable for rounded floor. Rear and side welded reinforcement rails. Top with welded sink, dripping area where indicated, rounded (R=10mm) front upper edge, as well as rounded (R=2mm) side and back edges. Rear stainless steel upstand H=100mm, welded and closed on the back, and with R=10mm rounded lower edge. Front and side upper s.s. cover panels. PVC siphon, drain and stainless steel overflow included. On adjustable feet.

SKU: N/A

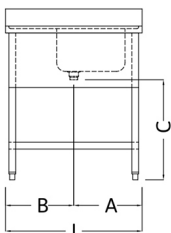

		W	S				W	S			
		600					700				
L	Cod.	LxHxP	A	B	C	Cod.	LxHxP	A	B	C	
	1000	T40001030	500x400x250	525	475	490	T40002030	500x500x300	525	475	440
	1200	T40001031	500x400x250	725	475	490	T40002031	500x500x300	725	475	440
	1300	T40001032	500x400x250	775	525	490	T40002032	500x500x300	775	525	440
	1400	T40001033	500x400x250	855	545	490	T40002033	600x500x315	815	585	425
	1500	T40001034	500x400x250	935	565	490	T40002034	600x500x315	865	605	425

S = Sink bowl / Vasche / Becken / Bac.
W = Width / Profondità / Breite / Profondeur.
L = Length / Larghezza / Länge / Longueur.