



SINK ON LEGS WITH 2 STANDARD SINK BOWLS AND LOWER SHELF





Length	1000, 1200, 1300, 1400, 1500, 1600
Width	600, 700

Frame structure in stainless steel AISI 304 fully welded 40x40mm tube, 1.00mm thick, with rear legs 80mm advanced, suitable for rounded floor. Lower reinforced shelf fully welded to the framework. Top with welded 2 sink bowls, dripping area where indicated, rounded (R=10mm) front upper edge, as well as rounded (R=2mm) side and back edges. Rear stainless steel upstand H=100mm, welded and closed on the back, and with R=10mm rounded lower edge. Front and side upper s.s. cover panels. PVC siphon, drain and stainless steel overflow included. On adjustable feet.

SKU: N/A

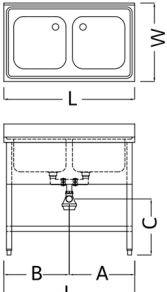

		W	S				W	S			
		600					700				
L	Cod.	LxHxP	A	B	C	Cod.	LxHxP	A	B	C	
	1000	T40401001	400x400x250	500	500	460	T40402001	400x500x250	500	500	460
	1200	T40401002	500x400x250	600	600	460	T40402002	500x500x300	600	600	410
	1300	T40401003	500x400x250	650	650	460	T40402003	500x500x300	650	650	410
	1400	T40401004	500x400x250	700	700	460	T40402004	600x500x315	700	700	395
	1500	-	-	-	-	-	T40402005	600x500x315	750	750	395
	1600	-	-	-	-	-	T40402006	600x500x315	800	800	395

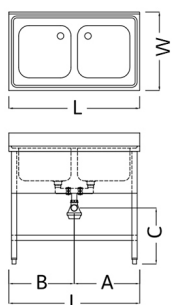

S = Sink bowl / Vasche / Becken / Bac.
W = Width / Profondità / Breite / Profondeur.
L = Length / Larghezza / Länge / Longueur.