



SINK ON LEGS WITH 2 STANDARD SINK BOWLS IN THE MIDDLE



Length	1800, 1900, 2000, 2100, 2200, 2400
Width	600, 700



Frame structure in stainless steel AISI 304 fully welded 40x40mm tube, 1.00mm thick, with rear legs 80mm advanced, suitable for rounded floor. Rear and side welded reinforcement rails. Top with 2 welded sink bowls, dripping area where indicated, rounded (R=10mm) front upper edge, as well as rounded (R=2mm) side and back edges. Rear stainless steel upstand H=100mm, welded and closed on the back, and with R=10mm rounded lower edge. Front and side upper s.s. cover panels. PVC siphon, drain and stainless steel overflow included. On adjustable feet.

SKU: N/A

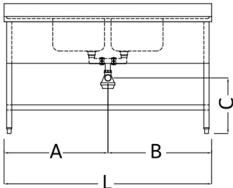

L	W			S			W			S		
	600						700					
	Cod.	LxHxP	A	B	C	Cod.	LxHxP	A	B	C		
	1800	T40101030	400x400x250	900	900	460	T40102030	400x500x250	900	900	460	
	1900	T40101031	400x400x250	950	950	460	T40102031	400x500x250	950	950	460	
	2000	T40101032	500x400x250	1000	1000	460	T40102032	500x500x300	1000	1000	410	
	2100	T40101033	500x400x250	1050	1050	460	T40102033	500x500x300	1050	1050	410	
	2200	T40101034	500x400x250	1100	1100	460	T40102034	600x500x315	1100	1100	395	
	2400	-	-	-	-	-	T40102035	600x500x315	1200	1200	395	

S = Sink bowl / Vasche / Becken / Bac.
W = Width / Profondità / Breite / Profondeur.
L = Length / Larghezza / Länge / Longueur.