



SINK ON LEGS WITH 2 STANDARD SINK BOWLS ON THE RIGHT





Length	1400, 1500, 1600, 1700, 1800, 1900, 2000
Width	600, 700

Frame structure in stainless steel AISI 304 fully welded 40x40mm tube, 1.00mm thick, with rear legs 80mm advanced, suitable for rounded floor. Rear and side welded reinforcement rails. Top with 2 welded sink bowls, dripping area where indicated, rounded (R=10mm) front upper edge, as well as rounded (R=2mm) side and back edges. Rear stainless steel upstand H=100mm, welded and closed on the back, and with R=10mm rounded lower edge. Front and side upper s.s. cover panels. PVC siphon, drain and stainless steel overflow included. On adjustable feet.

SKU: N/A

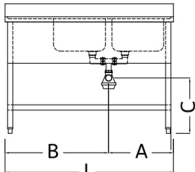

	W			S						W			S					
	600									700								
L	Cod.	LxHxP	A	B	C	Cod.	LxHxP	A	B	C								
	1400	T40101020	400x400x250	900	500	460	T40102020	400x500x250	900	500	460							
	1500	T40101021	400x400x250	1000	500	460	T40102021	400x500x250	1000	500	460							
	1600	T40101022	500x400x250	1000	600	460	T40102022	500x500x300	1000	600	410							
	1700	T40101023	500x400x250	1100	600	460	T40102023	500x500x300	1100	600	410							
	1800	T40101024	500x400x250	1200	600	460	T40102024	600x500x315	1100	700	395							
	1900	T40101025	500x400x250	1300	600	460	T40102025	600x500x315	1200	700	395							
	2000	T40101026	500x400x250	1400	600	460	T40102026	600x500x315	1300	700	395							

S = Sink bowl / Vasche / Becken / Bac.

W = Width / Profondità / Breite / Profondeur.

L = Length / Larghezza / Länge / Longueur.