




## TEARDROP - BASE

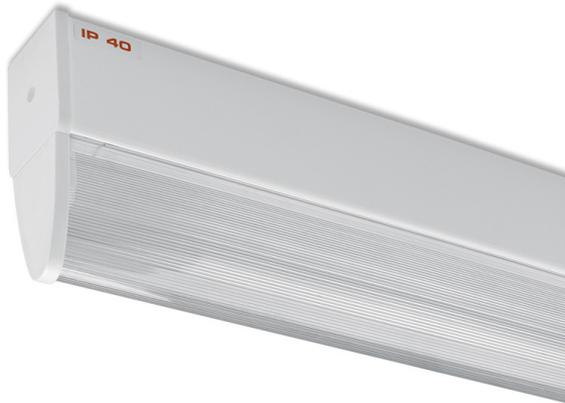




Aerodynamic ceiling lights for Clean Rooms application.

---

**SKU:** N/A



# PRODUCT DESCRIPTION

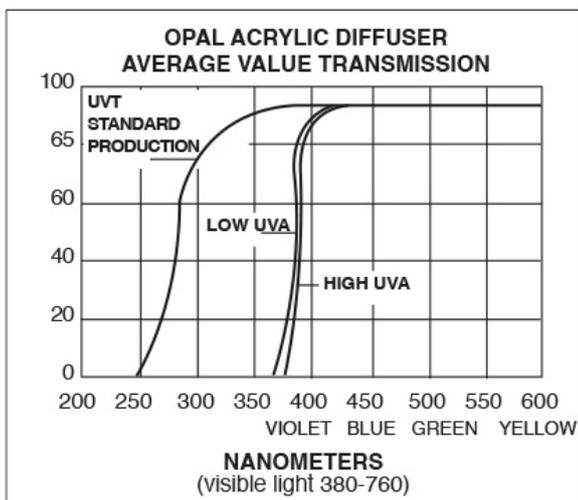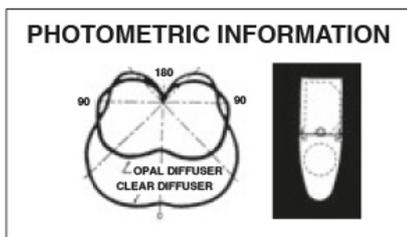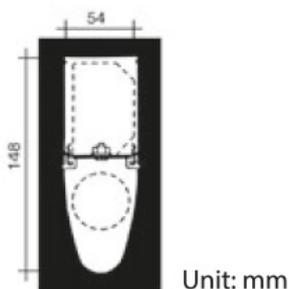

% FACTOR REFLECTION: CEILING								
80			70			70		
% FACTOR REFLECTION: WALLS								
*RCL	70	50	30	70	50	30	50	30
INDEX FOR FACTOR REFLECTION: FLOOR								
0	90	90	90	85	85	85	75	75
1	80	75	71	75	71	67	62	59
2	72	65	59	67	61	55	53	49
3	65	56	49	61	53	47	47	42
4	59	49	42	55	46	40	41	35
5	54	44	36	51	41	34	36	31
6	50	39	31	47	37	30	32	27
7	46	35	27	43	33	26	29	23
8	42	31	24	39	29	23	26	21
9	39	28	21	37	27	20	24	18
10	36	25	19	34	24	18	21	16

\*RCL: room cavity report



## Applications

Cleanrooms for the Semiconductor, Electronic, Optical, Mechanical, Aerospace, Pharmaceutical, Medical and Hospital industries.

## Components' description

- Body: In anodized natural aluminium totally in colour white painted with epoxipolyester powders at 150°C ral 9010 or in stainless steel 304 polish or satin.
- Electric wiring: In class I homologated, executed with ballast and components approved.
- Diffuser: Polycarbonate special screen.

## Specifications

- Power supply: 240 Vac - 50Hz
- Wattage: 22W - 44W - 60W

- IP 40  CEI Class I 
- CE

## Optional components

- Normal or DALI dimmable electronic ballasts
- Emergency wiring with inverter and NiCd batteries - LED tubes
- LED tube