



TEARDROP - EVO



Teardrop

Central, Initial, Single

Aerodynamic ceiling lights especially conceived for Clean Rooms and Laminar Air Flow Systems: their width (50 mm) and the special shape of the screen allow an excellent airflow control without turbulence.

Teardrop ceiling lights are constructed to enable the creation of rows of lights.

SKU: N/A




PRODUCT DESCRIPTION

Technical Data


IP58

- **Dimensions (AxBxH):** 1526x50x125
- **Feeding voltage:** 240Vca 50Hz
- **Protection degree:** IP40
- **Power:** 58
- **Weight (Kg):** 3,5


Photometric Curves

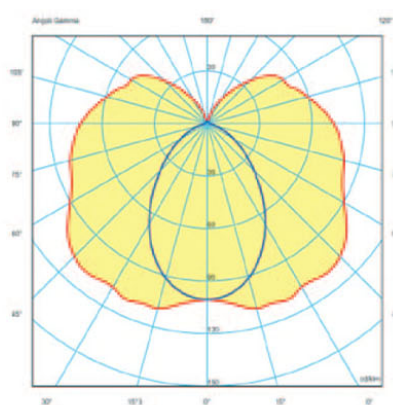

18W

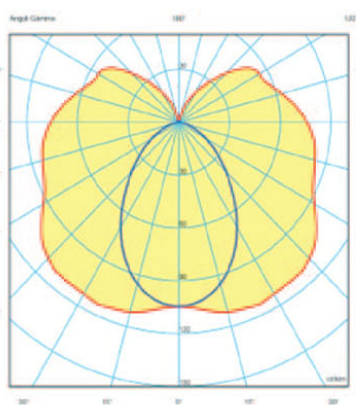

36W

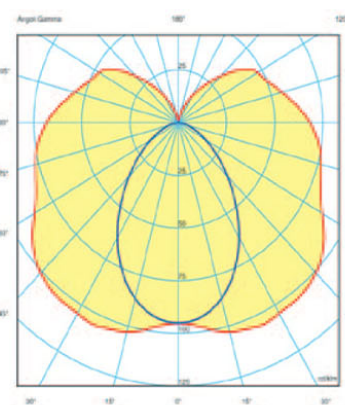

58W



Applications

Cleanrooms and Laminar Flow Systems for the Semiconductor, Electronic, Optical, Mechanical, Aerospace, Pharmaceutical, Medical and Hospital industries.

Components' description

Body

in anodized aluminium.

Lamp holder

made of aluminium profile.

Diffuser

made of transparent polycarbonate characterised by a good flexibility, an optimum mechanical resistance and a good fire resistance.

Link

Male - Female linkable design

Seamless

no dark in-line connections

Phase selector

built-in phase selector

Protection

built-in fuse

Specifications

- Power supply: 240 Vac - 50Hz
- Wattage: 66W
- IP 42
- CE

Optional components

- Special wiring for linkable design



- LED tube